



Quick guide — — Overview buttons and guidance screen

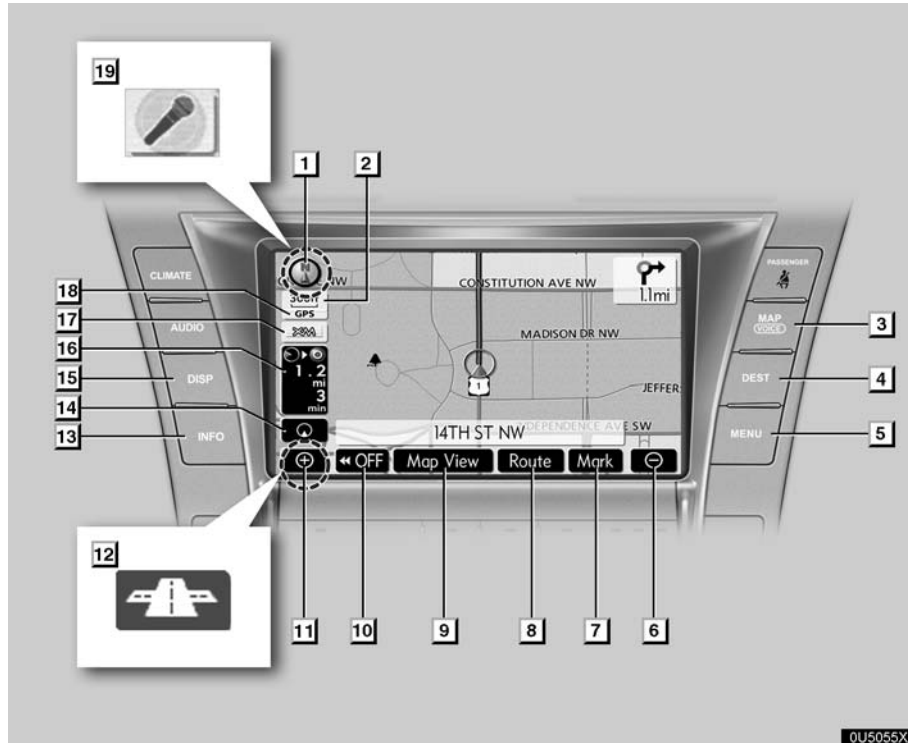

No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation.	36
2	Scale indicator	This figure indicates the map scale.	34
3	“MAP/VOICE” button	Push this button to repeat a voice guidance, cancel one touch scroll, start guidance, and display the current position.	28, 70
4	“DEST” button	Push this button to display the “Destination” screen.	7, 9, 11, 12, 38, 39
5	“MENU” button	Push this button to display the “Menu” screen.	86, 88, 89, 90, 92, 106, 117, 331

No.	Name	Function	Page
6	Zoom out button	Touch this button to reduce the map scale.	34
7	“Mark”	Touch this button to register the current position or the cursor position as a memory point.	29
8	“Route”	Touch this button to change the route.	72, 74
9	“Map View”	Touch this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	78, 81, 82, 83
10	“◀◀OFF”	Touch this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by touching “ON▶▶”.	109
11	Zoom in button	Touch this button to magnify the map scale.	34
12	Foot print map button	Touch this button to display the foot print map and the building information.	35
13	“INFO” button	Push this button to display the “Information” screen.	124, 128, 136, 194, 197, 199
14	Screen configuration button	Touch this button to change the screen mode.	32
15	“DISP” button	Push this button to display the “Display” screen.	192
16	Distance and time to destination	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	71
17	XM® NavTraffic mark	This mark is displayed when XM® NavTraffic information is received.	116
18	“GPS” mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	320
19	Speech command system indicator	The microphone is shown by pulling the talk switch. The speech command system can be operated while this indicator is shown.	188


— Registering home

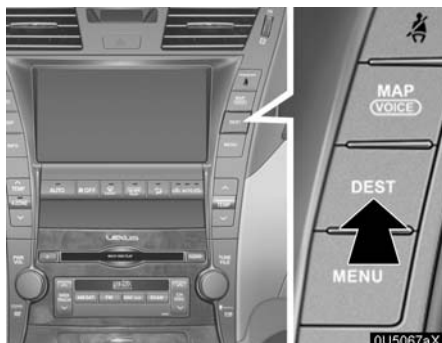


1 Push the “DEST” button.



2 Touch .

If home has not been registered, you can register it by touching .

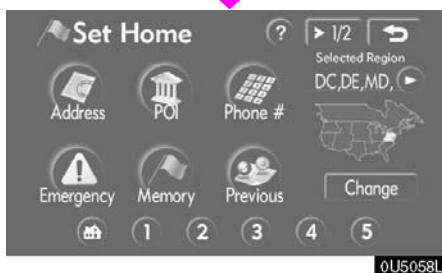

3 There are 11 different methods to search your home.

See “Destination search” on page 39.



4 Touch “Enter”.

The “Memory Point” screen is displayed.




5 Touch "OK".

Registration of home is complete.

You can also register home by touching the "**MENU**" button. (See " — Registering home" on page 100.)

You can change the icon, quick access, name, location and phone number. (See " — Editing memory points" on page 94.)

— Registering preset memory points (Quick access)

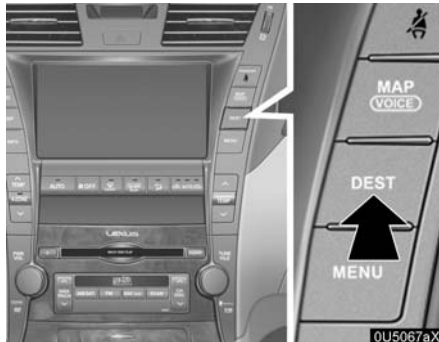

1 Push the “DEST” button.




2 Touch one of the quick access buttons.

You can set a memory point to one of the quick access buttons which has not been set.




3 There are 12 different methods to search preset memory points.

See “Destination search” on page 39.

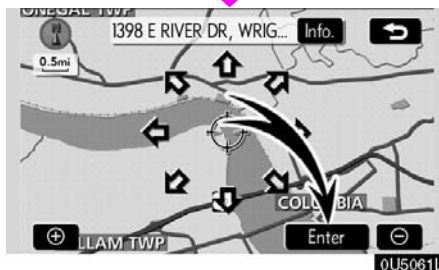

4 Touch “Enter”.

The “Memory Point” screen is displayed.

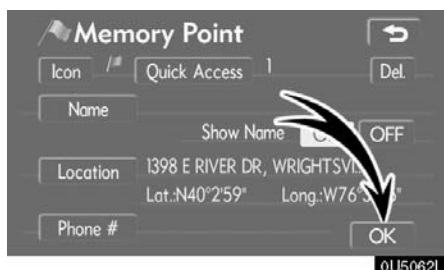

5 Touch “OK”.


Registration of preset memory points is complete.

You can also register preset destinations by touching the “**MENU**” button. (See “ — Registering memory points” on page 93.)


You can change the icon, quick access, name, location and phone number. (See “ — Editing memory points” on page 94.)

The registered points can be used on the “Destination” screen. (See “ — Destination search by Quick access” on page 42.)

— Operation flow: guiding the route

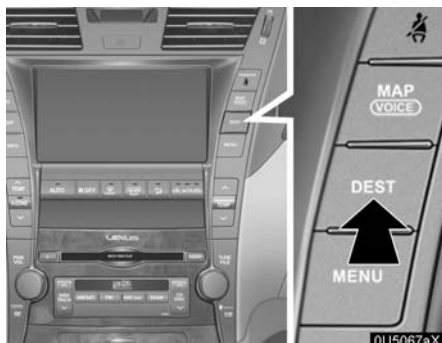


1 Push the “DEST” button.

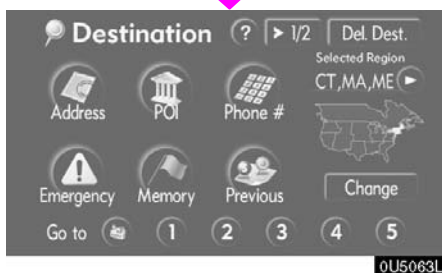


2 There are 12 different methods to search destinations.

See “Destination search” on page 39.

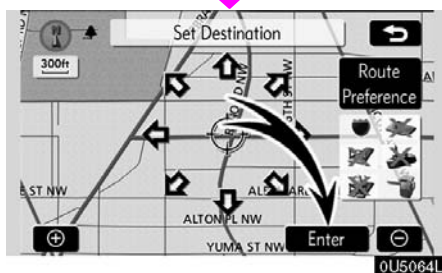

3 Touch “Enter”.

The navigation system performs a search for the route.

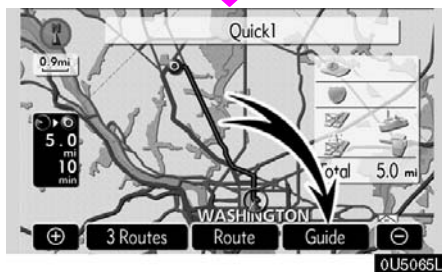


4 Touch “Guide”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 60.)

5 Guidance to the destination is given via voice and on the guidance screen.


— Setting home as the destination

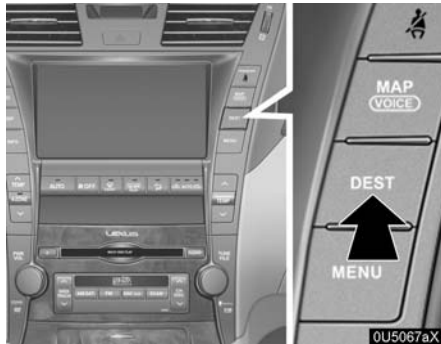


1 Push the “DEST” button.



2 Touch .

The  can be used if your home has been registered. (To register “Home”, see “— Registering home” on page 7.)

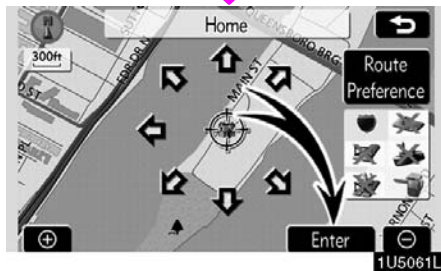

3 Touch “Enter”.

The navigation system performs a search for the route.



4 Touch “Guide”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 60.)

5 Guidance to the destination is given via voice and on the guidance screen.